RH60

User's Manual

Comfortable use with touch screen

Remote Solution

Remote Solution

General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION
READ THIS INFORMATION BEFORE USING RH60

NOTICE

I Section 15.19 Labelling requirements.

This device complies with part 15 of the FCC rules.
Operation is subject to the following two conditions:

(1) This device may not cause harmful interference and
(2) This device must accept any interference received, including interference that may cause undesired operation.

I Section 15.21 Information to user.

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

I IMPORTANT NOTE :

To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

R@mote Solution
www.remotesolution.co.kr

Contents

Chapter 1 | Preparing to Use the Product

Product Features	1
Safety Precautions	2
Components	4
Parts Diagram	5
Battery Removal and Insertion	9
Recharging and Turning Power On/Off	10
Product Specifications	11

Chapter 2 | Learning to Use the Menus

Menu Structure	14
Display Structure	15
<DEVICES> Mode	18
<MY PICK> Mode	21
<OTHERS> Mode	22

Chapter 3 | Configuring the Settings

<SETTING> Mode	28

Chapter 1 | Preparing to Use the Product

Product Features 1
- Product Features 1

Safety Precautions 2
- About the Power Supply 2
- About the Product 3

Components 4
- Standard 4
- Optional 4

Parts Diagram 5
- Remote 5
- Cradle 6
- SubRemote (Optional) 7
- RF Receiver & IR Converter (Optional) 8

Battery Removal and Insertion 9
- Battery Removal 9
- Battery Insertion 9

Recharging and Turning Power On/Off 10
- Recharging with an Adapter 10
- Turning the Remote Control Power On/Off 10

Product Specifications 11
- Product Specifications 11

Product Features

I Product Features

1. Touch screen that facilitates usage convenience
2. Wheel mechanism that allows for easy page navigation
3. Simple user interface that promotes intuitive use
4. Low power consumption that extends battery life
5. Distinctive design including a 3.9-inch color LCD
6. RF function that enables multi-room control

Safety Precautions

The following information is included to promote user safety and prevent any possible injury or property damage. Please read the directions carefully and use the product correctly..

I About the Power Supply

Only charge using the power supply provided.

An incorrect power supply can cause damage to the product.

Do NOT touch the power plug with wet hands.

This can result in electric shock.

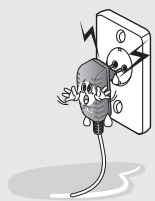

Make sure the plug fits tightly into the outlet.

Loose plugs can cause electric shock.

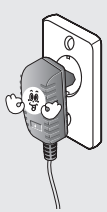

Do not fold the power cable or place anything heavy on it.

This can result in electric shock.

Do Not use too many plugs in a single power outlet.

This can result in electric shock.

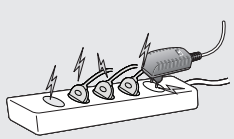

Unplug the power plug during electrical storms.

Lightning can cause an electric shock.

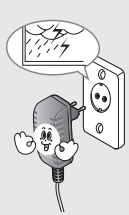

Safety Precautions

I About the Product

Do not use the product in high temperatures or high humidity.

This can cause damage to the product.

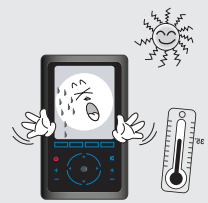

Do not disassemble the product.

This can result in damage to the product.

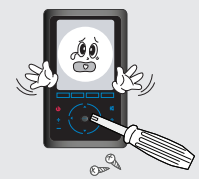

Do not place heavy objects on the product.

This can cause breakdown or damage to the product.

Clean the product with a soft, dry cloth. Do NOT use any flammable cleaners or chemicals.

This can cause damage to the surface of the product.

Do not allow foreign objects or liquid to get inside the product.

This can result in damage to the product.

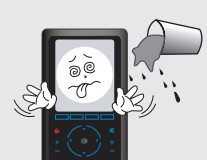

Do not allow children to play with the remote.

If the product is dropped, this can cause damage or injury.

Components

Components may be replaced without any prior notice in the interest of improving product quality or performance. The components shown here in the manual may differ from the components included with purchase.

I Standard

Main Unit

Cradle

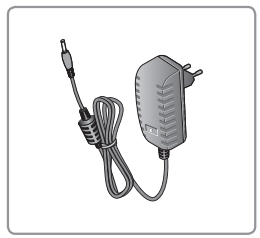
Adapter

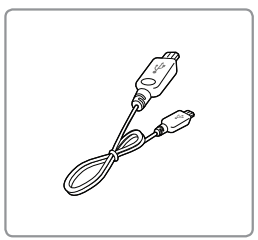
USB Cable

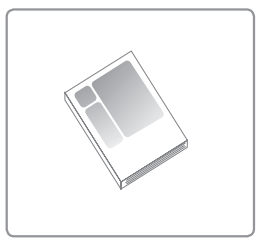
Product Manual

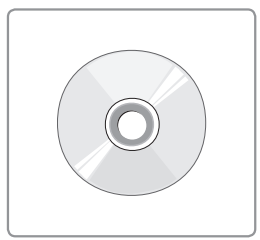
SETUP CD

I Optional

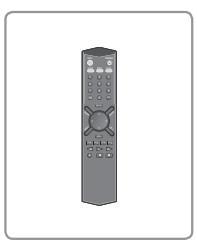
Sub-Remote Control

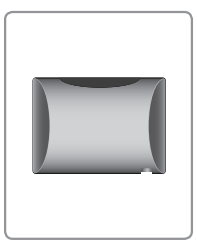
RF Receiver

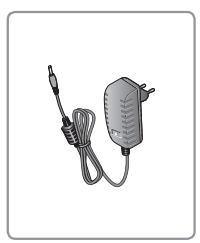
Adapter

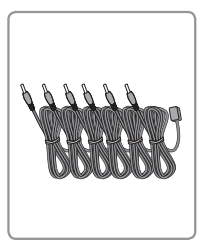
6-CH IR Flashers

Parts Diagram

The diagram may differ with the purchased product.

I Remote

Parts Diagram

The diagram may differ with the purchased product.

I Cradle

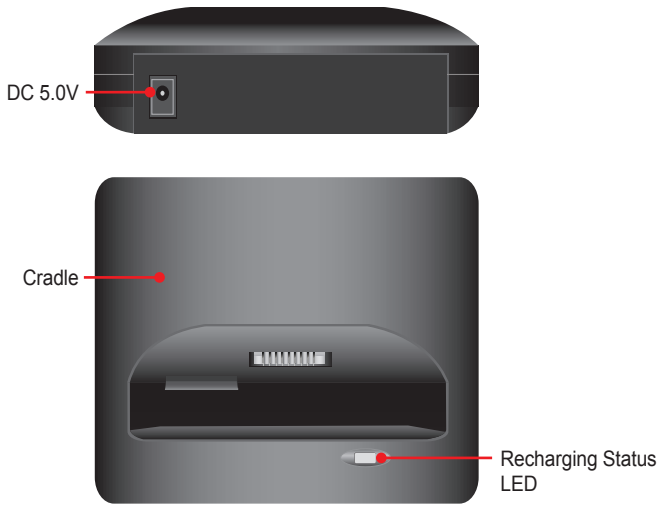

Note

- The LED glows red when charging is needed.
  After fully charged, the lamp turns green.
- Recharging time can vary.
- When the device is first connected to a power source, the LED flashes orange.

Parts Diagram

The diagram may differ with the purchased product.

I SubRemote (Optional)

The SubRemote is used when the Main Remote is being recharged
SubRemote is available when the Main Remote is plugged into the Cradle, and the Main Remote must be selected to RF mode

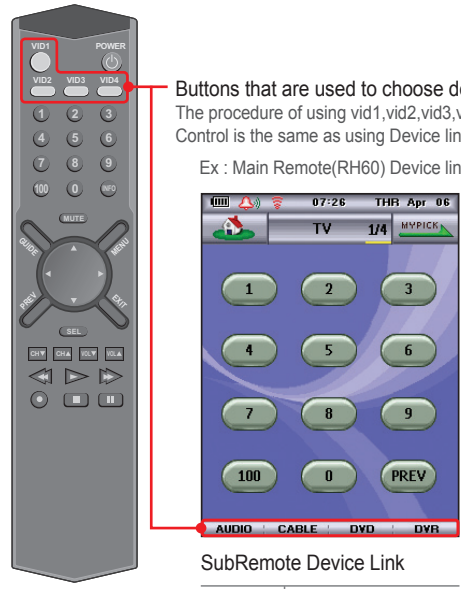

SubRemote Device Link

VID1	AUDIO
VID2	CABLE
VID3	DVD
VID4	DVR

Parts Diagram

The diagram may differ with the purchased product.

I RF Receiver & IR Converter (Optional)

Adaptor Spec : DC 12V, 300mA
Receives and changes a RF signal from the Main Remote or SubRemote to an IR signal

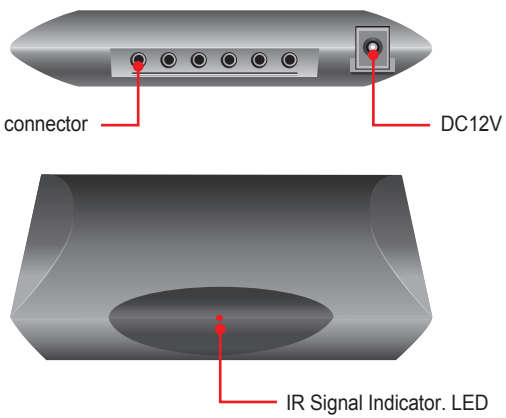

When it is first turned on IR Signal Indicator LED will blink 4 times
If it does not blink 4 times, contact your distributor.
When the RF ID correctly corresponds with the RF Code, the IR Signal Indicator LED will turn on and the IR code will be transmitted.

* The back (side) Rotary Switch

RF ID Change

Battery Removal and Insertion

I Battery Removal

Open the battery cover by pushing in the direction of the arrow.

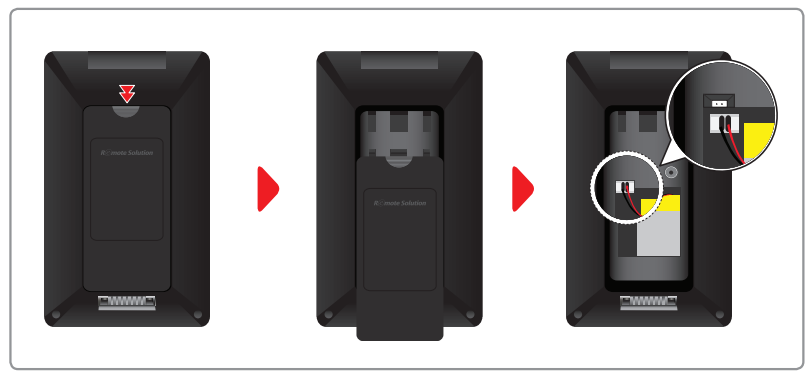

I Battery Insertion

Connect 1 and secure the cover to 2 and then close it.

Recharging and Turning Power On/Off

I Recharging with an Adapter

Insert the adapter cable into the cradle and then plug the other end into a power outlet.

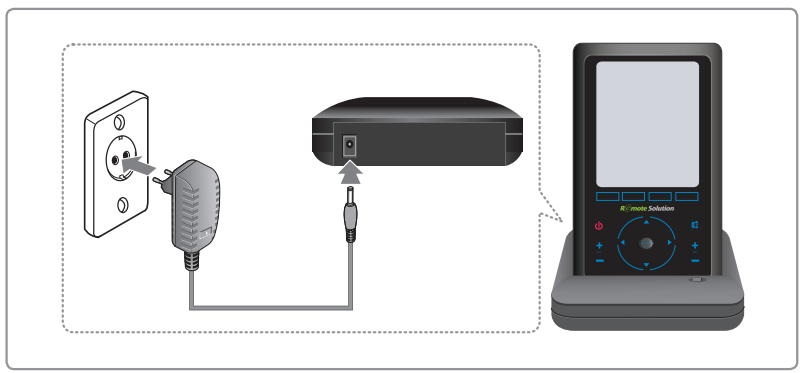

I Turning the Remote Control Power On/Off

The icon is NOT related to the remote control power function.

Open the cover at the rear of the remote control and unplug the wire to turn off the remote control power.

As the wire can be severed, be careful when unplugging.

Note

In case that overvoltage, over 6V, impacts the remote control unit, the product does not work by the operation of the protective circuit. In order to resume the remote control unit's operation, remove the battery and then reinsert it to the unit.

Product Specifications

Product specifications can be changed without any prior notice to improve product performance and quality.

I Product Specifications

Item		
SoC	Processor Type	259 QFP
	Processor	Hynix HMS30C7202 Processor 80MHz
	CPU Core	ARM 720T
	Memory Controller	16&32 bit modes,
	LCD Controller	Mono/Color STN, TFT LCD
	USB Controller	USB (Slave) 1.1
Memory	Flash Memory	64Mb x 16 bit or 128Mb x 16 bit
	SDRAM	64Mb x 16 bit
	SRAM	8Mb x 16 bit [JTAG Debug]
External keys	Touch Panel	Touch panel controller ADS7843
	Touch Key	Touch sensor controller QT1080
	Touch Wheel	Touch slider controller MP1025
Backlight	LCD	CCFL Controller MP1025
	Key	EL. Controller ZSP4403
Signal Transmitted	IR	Infrared
	Zigbee (RF)	2.4GHz [IEEE® 802.15.4 Standard]
PC Interface	USB Device	USB 1.1 H/S
Battery	Rechargeable Li-Polymer	3.7V/ 1600mA
LCD	Color LCD	3.9" STN Color LCD (320x240)
Operating Current	RUN	MAX 500 mA @3.7V
	IDLE	TYP. 300 mA @3.7V
	SLEEP	MAX. 8mA @3.7V
Operating Voltage		3.0V ~ 6.0V
Operating Distance	IR	MIN. 10m
	ZIGBEE (RF)	MIN. 20m

R@mote Solution
www.remotesolution.co.kr

Menu Structure 14
Menu Structure 14

Display Structure 15
<HOME> - Screen 15
<DEVICES> - Screen 16
<DEVICES> - TV Screen 17

<DEVICES> Mode 18
<DEVCIES> - Using the TV Remote Control 18
Different Methods to Move to Another Page 19
<DEVICES> - Changing a Link 20

<MY PICK> Mode 21
<MY PICK> - Navigation 21

<OTHERS> Mode 22
<BIO RHYTHM> - Screen 22
<GAMES> - Screen 23
<MEMO> - Screen 24
<ALARM> - Screen 25

Menu Structure

I Menu Structure

The following shows menu buttons that are displayed on the LCD screen. Please refer to each function in the details shown below.

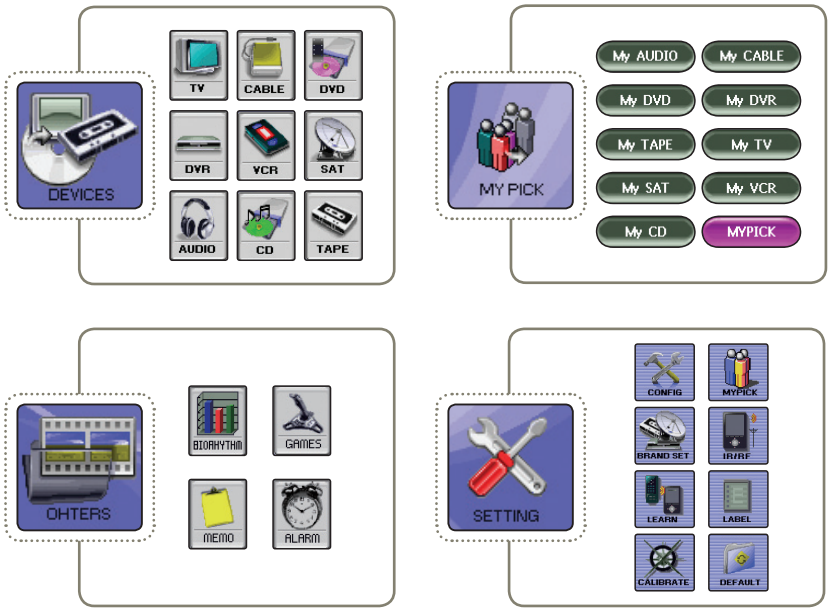

Display Structure

I <HOME> - Screen

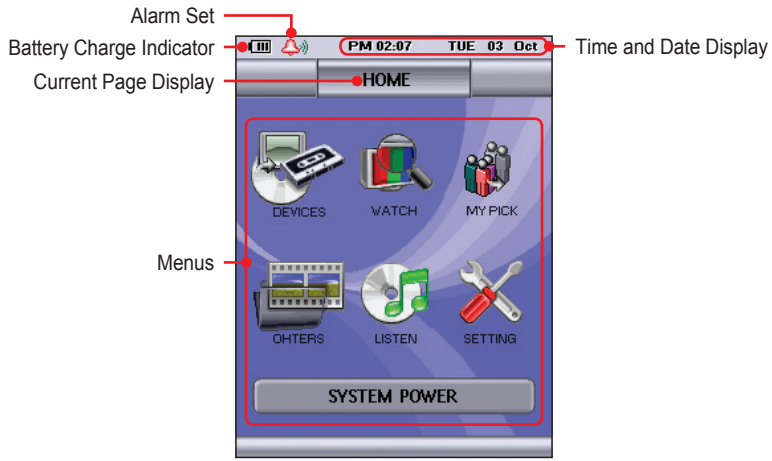

■ The following <HOME> icons are explained below.

: move to the device group that the user wishes to control.

: Watch is jump to Watching group.

: move to the My Pick group.

: move to the other functions menu.

: LISTEN is jump to listening group.

: move to the system settings menu.

SYSTEM POWER : System Power is power control on all devices.

Display Structure

I <DEVICES> - Screen ( )

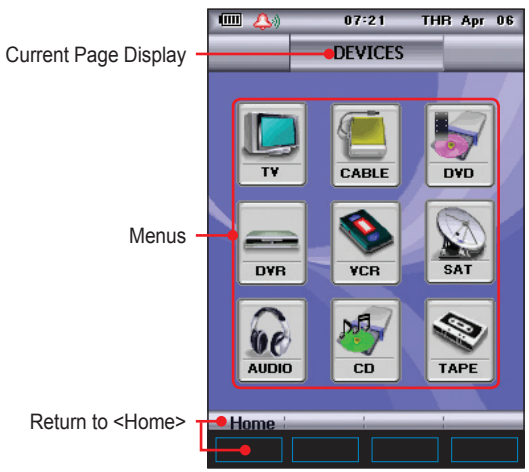

■ The <DEVICES> menu is explained below.

- Menus : user selects and moves to the page of the desired device.
- Home : return to the home screen by pressing the Home button or clicking on the box below the Home button.

Display Structure

I <DEVICES> - TV Screen ( )

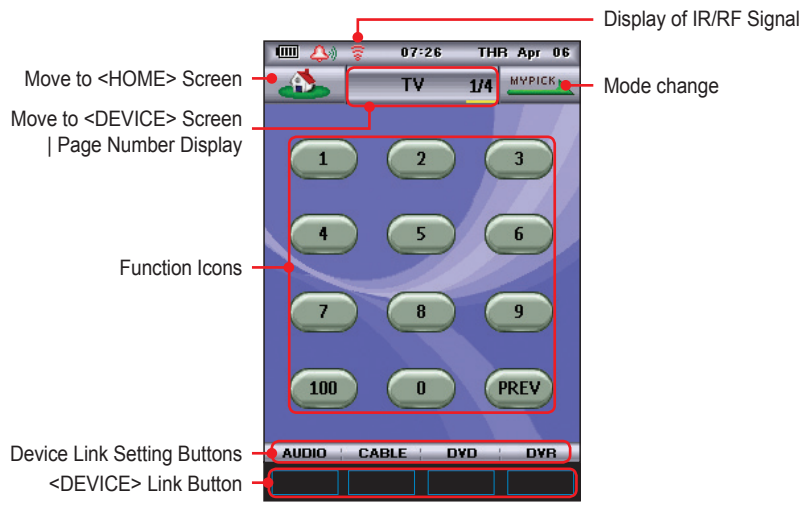

■ The following <Device> TV icons are explained as follows.

- TV 1/4 : moves to the device screen and displays the current mode.
- MYPICK : moves to <MY PICK>.
- DEVICE : moves to <DEVICES>.
- The function icons : are used to operate the device functions.
- Device link setting buttons: buttons to set device links (refer to page 20).
- <Device> link buttons : moves to pages preset in device link set.

<DEVICES> Mode

[<TV>, <CABLE>, <DVD>, <DVR>, <VCR>, <SAT>, <AUDIO>, <CD>, <TAPE>]
[HOME] ► Use the same method to move to the [DEVICES] menu.

I <DEVCIES> - Using the TV Remote Control

1 Press on <HOME> screen.

Displays the [DEVICES] screen.

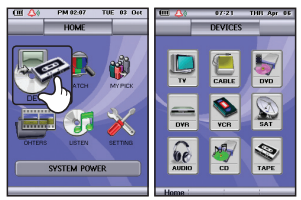

2 Press on <DEVICES> screen.

Displays the [DEVICES] TV screen.

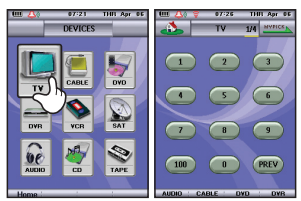

3 Press the function icons on the TV screen to turn the channels.

Use the wheel to move to another page.

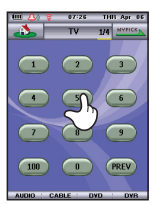

[Wheel]

4 Press to exit this mode.

Displays <HOME> screen.
(Refer to 33~35 page to set the brand.)

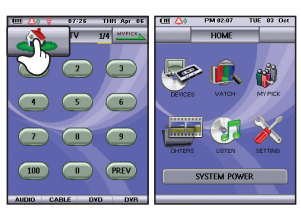

<DEVICES> Mode

I Different Methods to Move to Another Page

1 Move by pressing the icon.

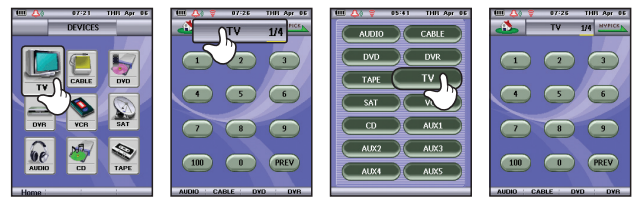

2 Move by pressing the icons.

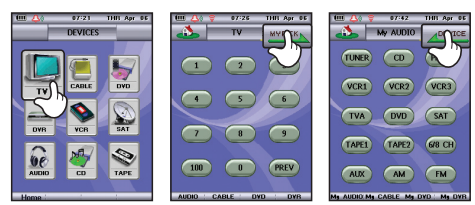

3 Move by pressing the device link buttons.

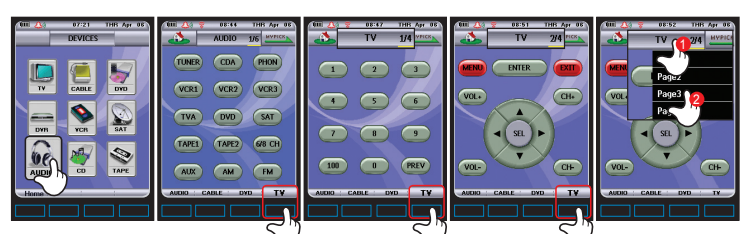

❶ Press the to show page information.
❷ Select the page name to move to the desired page.
(The wheel can also be used to move between pages)

<DEVICES> Mode

I <DEVICES> - Changing a Link

1 Press TV on the <DEVICES> screen.

Displays the TV screen.

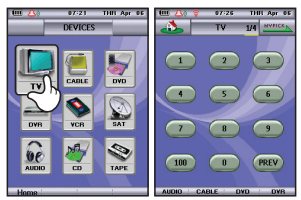

2 Press DVR.

Displays the [Device] screen.

3 Press CD.

Shows the menu for the changed link.

<MY PICK> Mode

I <MY PICK> - Navigation

1 Press the MY PICK icon on the Home screen.

Displays the [My Pick] screen.

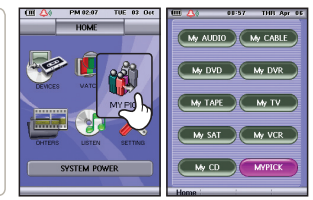

2 Press My TV.

Displays the [My TV] screen.

3 The My Pick Macro begins operation when the operation button on the <My TV> screen is pressed.

Refer to page 30~31 for My Pick settings.

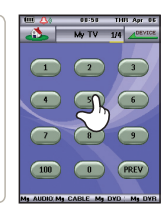

[Wheel]

4 Press the button to end.

Displays the <Home> screen.

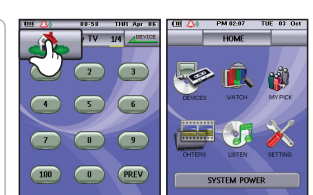

<OTHERS> Mode

I <BIO RHYTHM> - Screen ( )

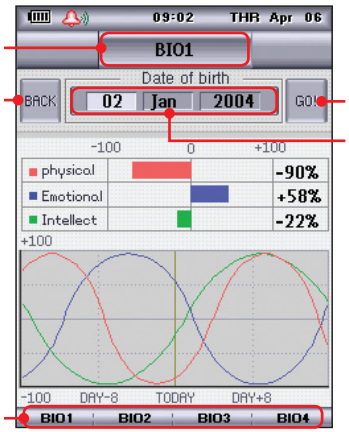

Move to the <Bio Rhythm> Screen

Move to the <Entertainment> Screen

Go button after DOB

Year/Month/Date Display

<Bio Rhythm> Link

■ The <BIO RHYTHM> icons are explained as follows.

- BIO1 : moves to the <Bio Rhythm> Screen.
- BACK : Moves to the Entertainment Screen.
- Date of birth : Touch the DOB screen to change the background color.
  The date of birth can then be modified using the wheel.
- GO! : Press to save modifications and display new bio rhythm information.

<OTHERS> Mode

I <GAMES> - Screen ( )

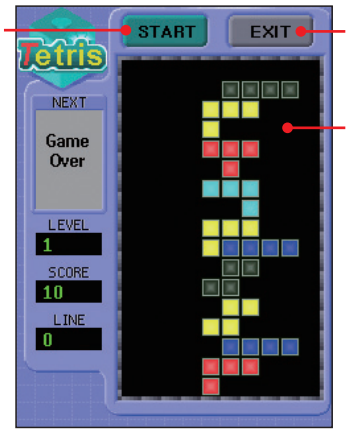

Game Start

Exit

Game Screen

■ The <GAMES> icons are explained as follows.

- Use [▲▼◄►] on the wheel.
  - UP (▲) : rotate/turn
  - Down (▼) : send to bottom
  - Left (◄) : move left
  - Right (►) : move right

* The start function is inoperable once the game has started.

<OTHERS> Mode

I <MEMO> - Screen ( )

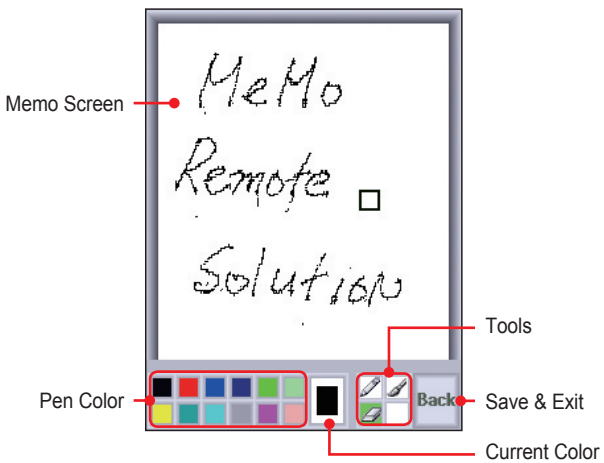

■ The <MEMO> icons are explained as follows.

- Memo Screen: Users can write memos.
- Pen Color: User can choose pen colors.
- Current Color: shows the current pen color selected by the user.
- Tools : (Pen) (Brush) (Eraser)
- Back : pressing this icon brings up the Save & Exit window.

[screen when Back pressed]

<OTHERS> Mode

I <ALARM> - Screen ( )

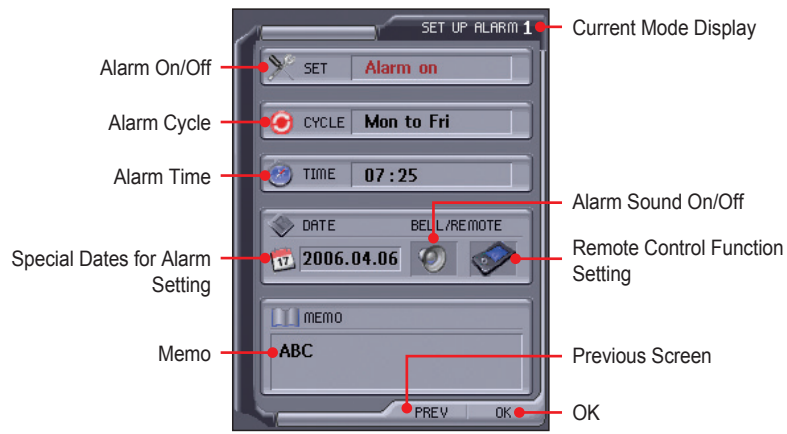

■ The <ALARM> icons are explained as follows.

Remote Control Function Setting :
The My Pick setting function controls both this alarm function as well as those of other devices.
The setting method is identical to that of the My Pick function (refer to page 30~31).

<SETTING> Mode **28**

<SETTING> - Menu Descriptions 28
<CONFIG> - Screen 29
<MYPICK> 30
<BRAND SET> - Screen 32
<BRAND SET> - TV Remote Control Setting 33
<IR/RF> - Output Mode Setting 36
<LEARN> - Learning Function Setting(Buttons) 37
<LEARN> - Learning Function Setting(Devices) 39
<LABEL> - EDIT Screen 40
<LABEL> - Group Label Edit 41
<LABEL> - MyPick Edit / Bio Rhythm Edit 43
<LABEL> - Device Button / Mypick Button 43
<CALIBRATE> - Touch Screen Setting 44
<CALIBRATE> - Wheel Setting 45
<DEFAULT> Menu Descriptions 46
<FACTORY DEFAULT> - Moving 46
<DEFAULT> - BRAND SET 47
<DEFAULT> - MYPICK 48
<DEFAULT> - LEARN 48
<DEFAULT> - ALL CLEAR 49
<DEFAULT> - CLONE 50

<SETTING> Mode

I <SETTING> - Menu Descriptions

<Config> Configure the remote control display.

<Mypick> Customize the remote control to the user's preferences.

<Brand set> Enter the remote control programming.

<IR/RF> Set the output mode.

<Learn> Learn the functions of a remote control.

<Label> Modify the button labels.

<Calibrate> Adjust the sensitivity of the LCD screen and the wheel.

<Default> Reset to factory defaults.

(All previously saved functions are deleted.)

<SETTING> Mode

I <CONFIG> - Screen ( )

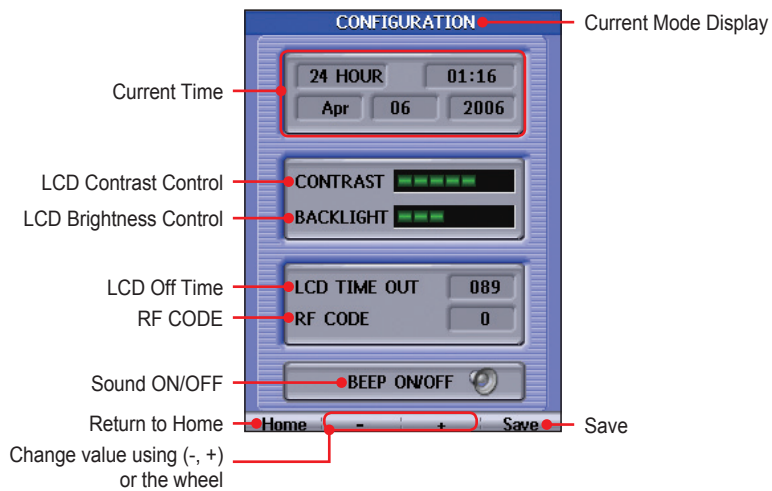

■ The <CONFIGURATION> icons are explained as follows.

To change any value, select the menu to change and adjust the value using the +/- buttons or rotating the wheel.

<SETTING> Mode

I <MYPICK>

Customize the remote control to the user's preferences.

1 Press MYPICK on the <REMOTE SETTING> Screen.

Displays the [My Pick Setting] Screen.

2 Press My AUDIO.

Select a button for macro installation.
Ex : TUNER

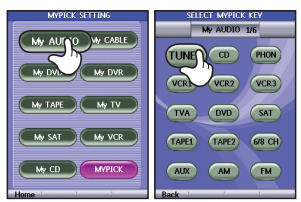

3 Press a button to install the macro. A saved button macro can be edited.

Press the desired button.
If there are saved buttons, the Edit list screen appears.

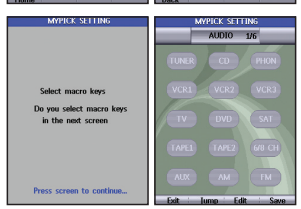

Note

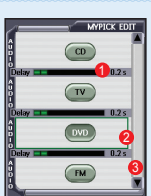

<Edit List Screen>

- ■ Cancel : go back to previous screen without saving.
- ■ ▶ : check the buttons saved on the device.
- ■ Delete : delete the buttons saved. (Select a button to delete and press delete.)
- ■ Add : go to previous screen after saving.

❶ Delay window: set the delay time after a function is inputted. Select a function button and set the delay time using the wheel (0.2~20 secs).
❷ This will be shown when the button is selected.
❸ Up/down:. More than 5 buttons can be viewed. (Up to 20 buttons can be saved).

<SETTING> Mode

4 Press CD ▶ TV ▶ DVD ▶ FM and press Save when finished.

Press the desired button.
Pressing the <Save> button saves the information, and is followed by the appearance of a message asking, "Changes to LABEL?"
Yes: moves to the label edit screen.
No: moves to <Select My pick key> screen.

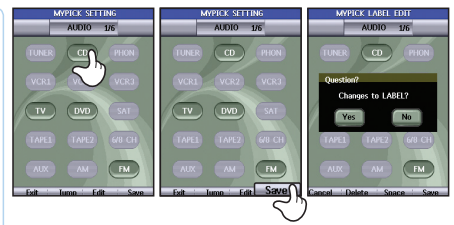

Note

- ■ Exit : go back to the previous screen.
- ■ Jump : move to the Jump Screen Setting.
- ■ Edit : move to the Edit List (refer to page 30).
- ■ Save : After saving, move to label editing (refer to page 40~42).

5 Press Save.

Please refer to the label editing screen. (page 40~42).

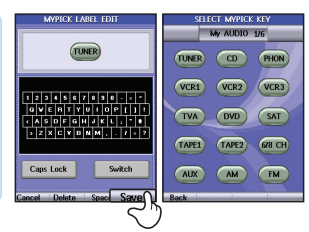

6 After pressing the Back icon, press the Home icon to end the mode.

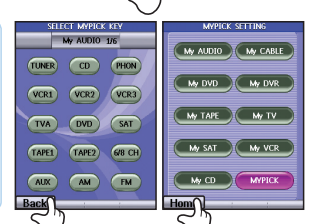

<SETTING> Mode

I <BRAND SET> - Screen ( )

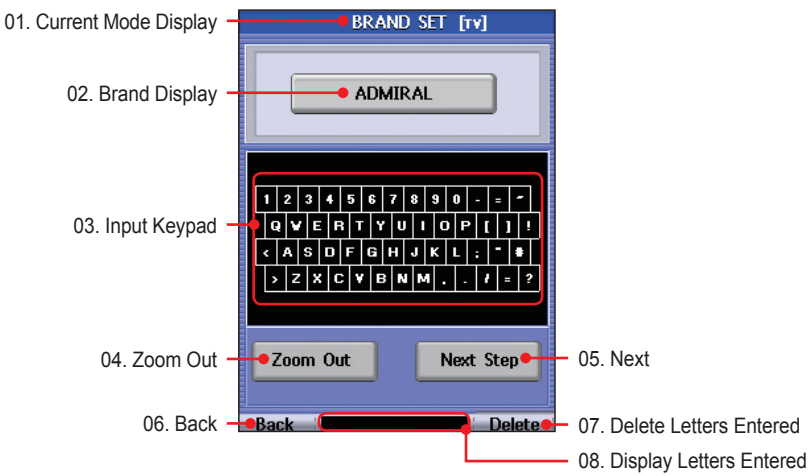

■ The <BRAND SET> icons are explained as follows.

01. Display Current Mode and Device Settings.
02. Display current brand, and click button to go to the next screen.
03. Keypad to enter the brand.
04. Zoom out.
05. Go to the next screen if the brand is correct.
06. Move to the <Preprogram> screen.
07. Deletes the letters entered.
08. Displays the letters entered.

<SETTING> Mode

[<AUDIO>, <CABLE>, <DVD>, <DVR>, <TAPE>, <TV>, <SAT>, <VCR>, <CD>, <AUX1~5>]
<HOME> ▶ Use the same method to move to the <BRAND SET> menu.

I <BRAND SET> - TV Remote Control Setting

■ Turn on the desired TV.
■ Ex : TV brand name LG (Goldstar).

■ Point the remote control at the TV.

1 Press in the <HOME> screen.

Displays the <REMOTE SETTING> screen.

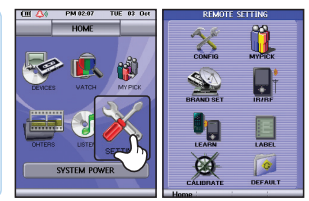

2 Press .

Displays the [Devices] TV screen.

3 Press TV.

Displays the <BRAND SET [TV]> touch pad.

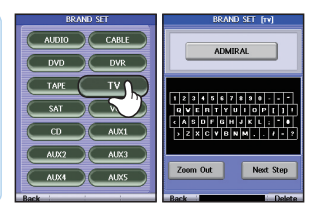

4 Press the first letter of the brand name (for instance, “L” for “LG”) on the <Brand set [TV]> screen.

Displays the touch pad to enter the brand name.

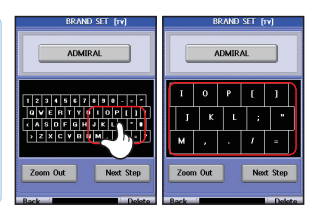

<SETTING> Mode

5 If the brand name displayed is a match, press the LG(GOLDSTAR) icon.

Rotate the wheel left or right to scroll up and down through the brand names.

6 Press LG(GOLDSTAR) and check if your selection is correct by testing the power.

Continue pressing [LG(GOLDSTAR)] to select the correct model from the list.
(Do NOT hold the button down)

BRAND SET [tv]
LG(GOLDSTAR)
Step1. Press above brand button until device turns on/off.
Step2. Press below Verify button to check all button function.
If Verify was successfull, press Save button. If fail, go to Step1.
Cancel
Verify
Save

7 If the TV power works, press the Verify.

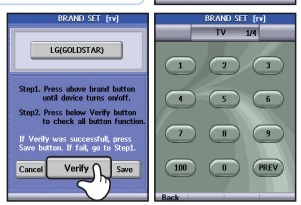

8 Check once again if it is the correct selection by using the number icons in the BRAND SET TV screen and/or wheel.

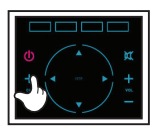

[Wheel]

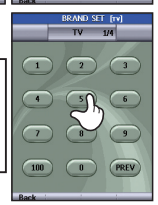

9 Press Back if all TV functions work.

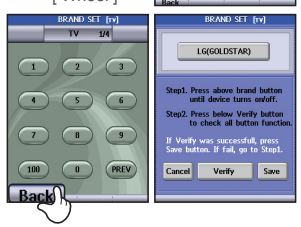

<SETTING> Mode

10 Press Save to save.

The TV remote control setting is complete.
The <BRAND SET> screen appears.

11 Press the Back button to end.

Repeat steps 3~11 to configure another TV.

Note

- Check the power supply status of the TV by using the LG (GOLDSTAR) icon.
- If power button works, verify all the functions with the <Verify> button. (move between screens using the wheel).
- Move to the next page using the wheel.

<SETTING> Mode

I <IR/RF> - Output Mode Setting

1 Press IR/RF in the <Remote Setting> screen.

Displays the [IR/RF Setting] screen.

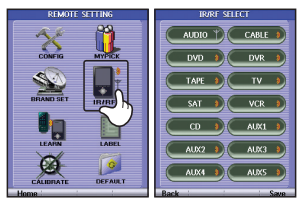

2 Press AUDIO.

AUDIO : RF output
AUDIO : IR output

3 After pressing the Save icon, press the Back icon to end the mode.

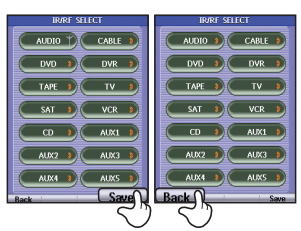

Note

■ You can learn the Power Key in two modes; Power On mode and Power Off mode.

<SETTING> Mode

I <LEARN> - Learning Function Setting(Buttons)

Point the original remote control towards the 5X remote control directly at each other and keep both remotes within About 1 inch in order to enable the learning function.

1 Learning Buttons

Press LEARN in the <REMOTE SETTING> screen.

Displays the <Learning> screen.

2 Press BUTTONS.

Buttons learn: transfers button functions.
Devices learn: transfers device functions.

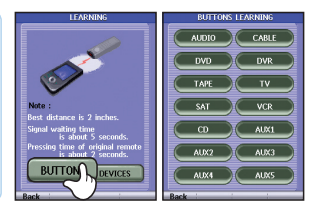

3 Press TV.

Select a device to be learned.
The SELECT LEARN BUTTON message will continue to flash if a key is not pressed.

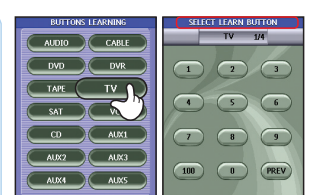

4 Press the icon to be learned.

Signals from the original remote control have a lag time of approximately 5 seconds. If no signal is registered for 5 seconds, a beep is sounded and the button pressed is reset.

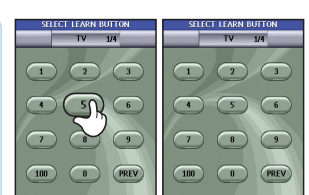

<SETTING> Mode

5 Press the original remote control's button you want to be learned within 5 seconds.

Saving is automatic after the signal is received.
After saving, the message, "Changes to LABEL?" appears.
Yes: moves to the Label Edit screen.
NO : moves to the Select Learn Button screen.

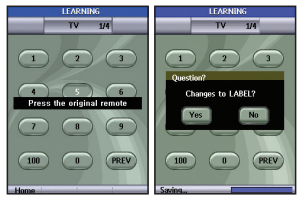

6 Press Save.

Please refer to page 40~42 for label editing methods.
S : shows functions undergoing learning.

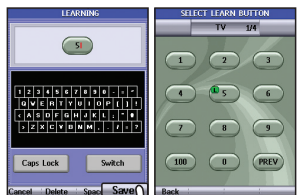

7 Press the Back icon to end.

Repeat steps 4~5 for more buttons to be learned.

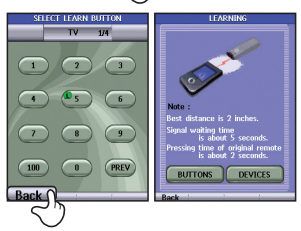

Note : How to learning

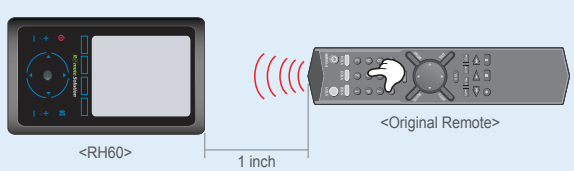

<SETTING> Mode

I <LEARN> - Learning Function Setting(Devices)

Point the original remote control and the remote control to undergo learning directly at each other within 1 inch.

1 Learning Devices

Press DEVICES in the <LEARNING> screen.

[Select the screen button] appears briefly.

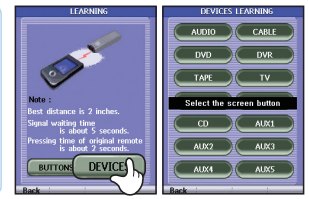

2 Press a device button to be learned.

Signals from the original remote control have a lag time of approximately 5 seconds. If no signal is registered for 5 seconds, a beep is sounded and the button pressed is reset.

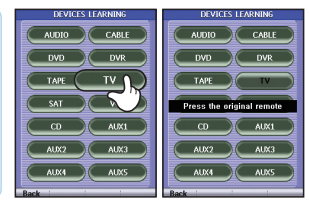

3 Press the original remote control's button you want to be learned within 5 seconds.

The signal is saved automatically after it is received.

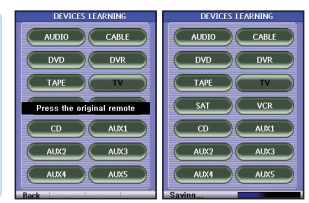

4 Press the Back icon to end.

[Select the screen button] message appears briefly. (repeat steps 2~3 if there are more devices to be learned).

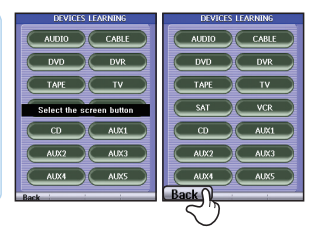

<SETTING> Mode

I <LABEL> - EDIT Screen (Group Label Edit > Device Edit > AUDIO)

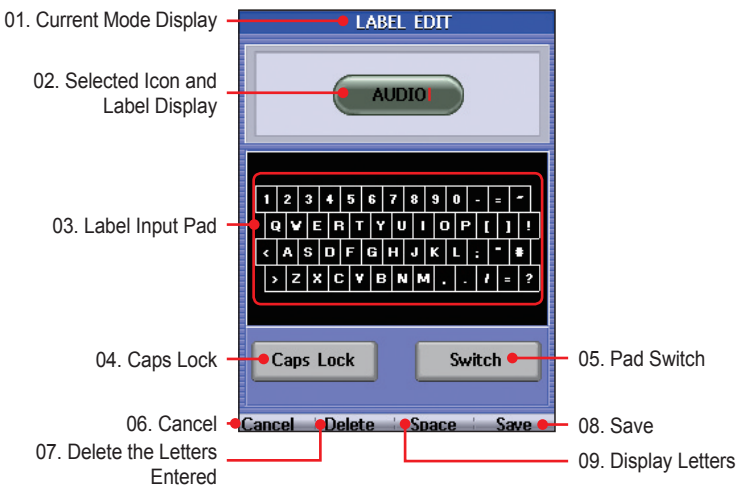

■ The <LABEL EDIT> menus are explained as follows.

01. Displays current mode.
02. Display the selected icon and label.
03. Keypad to enter the label.
04. Caps lock.
05. Move to a different pad page. (total of four)
06. Cancel.
07. Delete letters entered.
08. Save.
09. Enter a space.

<SETTING> Mode

I <LABEL> - Group Label Edit

1 Device Edit

Press LABEL in the <REMOTE SETTING> screen

Displays the [Label Edit] screen.

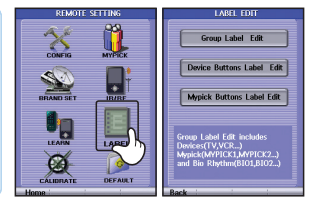

2 Press Group Label Edit.

Group Label Edit
- Device Edit
- MyPick Edit
- Bio Rhythm Edit

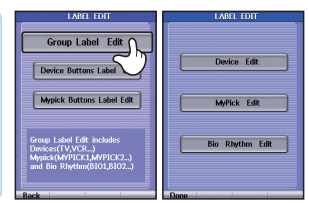

3 Press Device Edit.

4 Press AUDIO.

<SETTING> Mode

5 Press “1” in the <Label Edit> screen.

Displays a magnified pad.

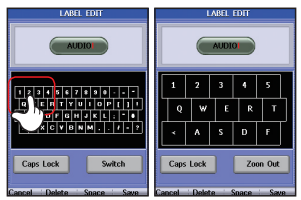

6 Press “1” in the <Label Edit> screen.

Displays the changed icon.

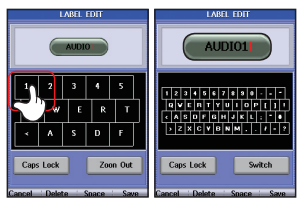

7 Press Save to end.

The <Label Edit> screen appears.
Repeat steps 4~7 if more label editing is desired.

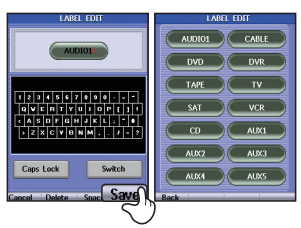

Note

■ Press Switch to go to a different pad page. (Total 4 pages)

<SETTING> Mode

I <LABEL> - MyPick Edit / Bio Rhythm Edit

The setting method for the MyPick Edit and the Bio Rhythm Edit is the same (refer to page 41~42).

1 MyPick Edit / Bio Rhythm Edit

Press LABEL.

Displays the [LABEL EDIT] screen.

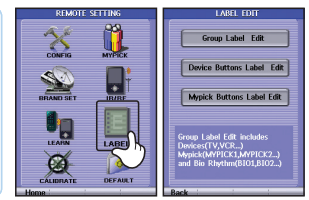

I <LABEL> - Device Button / Mypick Button

The setting method for the Device Button and the Mypick Button is the same (refer to page 41~42).

1 Device Button / Mypick Button

Press LABEL.

Displays the [LABEL EDIT] screen.

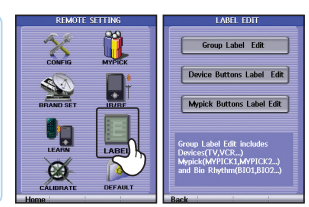

<SETTING> Mode

I <CALIBRATE> - Touch Screen Setting

1 Press in the <Remote Setting> screen.

Displays the <CALIBRATION> screen.

2 Press <Touch Screen>.

Displays the <Touch Screen> setting screen.

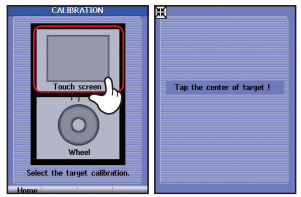

3 Press in sequence.

(Caution: Mark the center point precisely.)

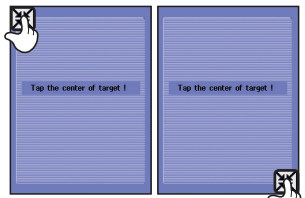

4 The <Calibration Success> message appears when finished, followed by saving and a return to the <Home> screen.

Displays the <Home> screen.

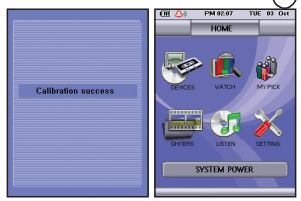

<SETTING> Mode

I <CALIBRATE> - Wheel Setting

1 Press the Wheel in the <Calibration> screen.

Displays the Wheel setting screen.

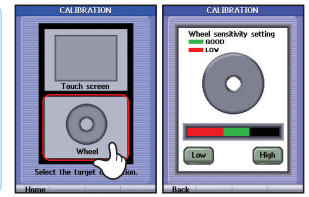

2 Press to adjust.

Low : decrease sensitivity.

High : increase sensitivity.

Caution : Check that the wheel works properly after adjustment is complete.

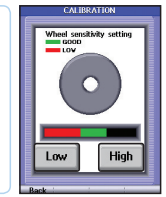

3 Press the icon to end.

The message “Would it action really true Changes to Wheel value?” appears.

Yes : moves to the Remote Setting screen.

No: returns again to the sensitivity adjustment screen.

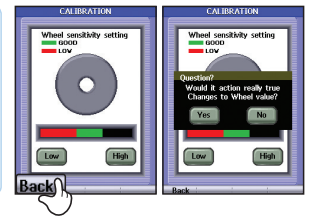

<SETTING> Mode

I <DEFAULT> Menu Descriptions

<Brand Set> Deletes remote control settings.

<Mypick> Deletes the customized settings.

<Learn> Deletes the information saved in learning mode.

<All Clear> Performs the deletions for all of the above.

<Clone> Copies information between remote controls.
(Can only be used when having two or more remote controls.)

I <FACTORY DEFAULT> - Moving

1 Press → icons in turn in the Home screen.

Displays the <FACTORY DEFAULT> screen.

<SETTING> Mode

I <DEFAULT> - BRAND SET

1 Delete data settings.

Press the icon in the <FACTORY DEFAULT> screen.

Displays the <BRAND SET DEFAULT> screen.

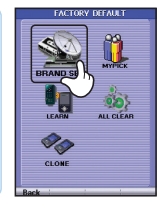

2 Press AUDIO.

Select a device to delete. (Ex : AUDIO)

AUDIO → AUDIO : When selected, the check mark disappears.

3 Press Default to delete the AUDIO device selected.

After deletion, the <FACTORY DEFAULT> screen appears.

<SETTING> Mode

I <DEFAULT> - MYPICK

The deletion procedures are identical with those of the <Brand Set> (refer to page 47).

1 Delete data settings

Press in the <FACTORY DEFAULT> screen.

Displays the <MYPICK DEFAULT> screen.

I <DEFAULT> - LEARN

The deletion procedures are identical with those of the <Brand Set> (refer to page 47).

1 Delete data settings

Press in the <FACTORY DEFAULT> screen.

Displays the <LEARNING DEFAULT> screen.

<SETTING> Mode

I <DEFAULT> - ALL CLEAR

Deletes all information saved in <Brand Set>, <My Pick>, and <Learn>.

1 Delete all data settings

Press in the <FACTORY DEFAULT> screen.

Displays the <FACTORY SETTING> screen.

2 Press All Clear.

After full deletion, the <FACTORY DEFAULT> screen appears.

All Clear : delete all.

Cancel : go back to the previous screen without saving.

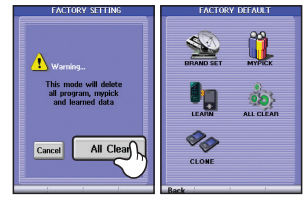

<SETTING> Mode

I <DEFAULT> - CLONE

Using two remote controls, a user can save all the information from one to the other.

1 1st Remote Control

Press CLONE in the <FACTORY DEFAULT> screen.

Ex : a completely configured remote control.
Press SOURCE.

2 2nd Remote Control

Press CLONE in the <FACTORY DEFAULT> screen.

Ex : a non-configured remote control.
Press TARGET.

3 When the progress bar has completed, it automatically saves and ends.

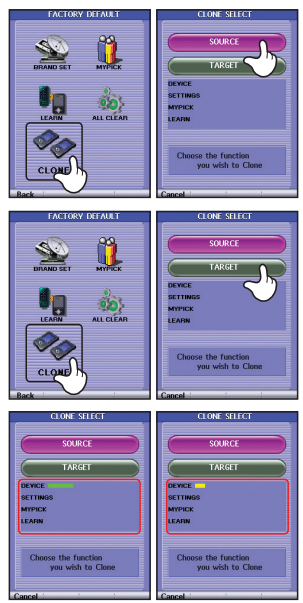

[SOURCE Remote] [TARGET Remote]

MEMO

MEMO